



Using Infra-Red Heater

Positioning:

1. These heaters are for INDOOR USE ONLY.
2. Do not expose the heater or power cables to rain or wet conditions. Any water entering the heater will increase the risk of electric shock.
3. DO NOT use this heater in a bathroom, shower room or any other wet environment.
4. NEVER locate the heater near combustible materials such as curtains, furniture, etc. Allow at least 1 metre clearance.
5. DO NOT locate the heater close to an adjacent wall or low ceiling. Allow at least 1 metre clearance. Avoid placing the heater directly below power sockets.
6. Take care to ensure that the wire guard cannot be covered.
7. DO NOT operate the heater in an explosive environment such as in the presence of flammable liquids, gases or dust such as in a spray booth.
8. NEVER stand the heater on a moveable vehicle where it may tip over.
9. Do not allow the halogen tubes to become covered in dust which could become a fire hazard. If used in a dusty workplace, it should be cleaned using a compressed air line (ALWAYS wear a dust mask if performing this operation).
10. Never touch the halogen tubes for at least 15 minutes after switching off.
11. DO NOT use the heater with a programmable timer used to switch it on automatically.
12. Use only in an upright position.
13. DO NOT leave the heater unattended.
14. If children are present ALWAYS use with a fireguard.
15. Store the heater out of reach of children and do not allow persons unfamiliar with these instructions to operate it.

Please keep this leaflet safely as it may be required for future reference



eha
EVENT HIRE ASSOCIATION

Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solithull B37 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

©Copyright Event Hire Association April 2012

 
Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

1842 Infra-Red Heater

Infra-Red Heater

It is important to read this entire leaflet before using the Infra-Red Heater - 240volt

1. There is a risk of injury if you do not follow the instructions printed in this guide.
2. This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.
3. Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip.
4. Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.
5. Never operate electrical switches with wet hands.
6. Always switch off and unplug the equipment from the power supply before moving or cleaning.
7. Check the equipment before use, if it shows signs of damage request a replacement.

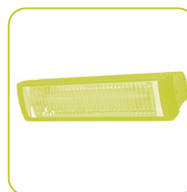

Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.eha.org.uk

Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solithull B37 7YE

eha
EVENT HIRE ASSOCIATION

Before Starting Work...



1. Once you have finished with the unit, switch off and unplug. Allow the unit to cool completely.
2. Do not use sharp objects, metal scrapers, wire brushes or wire wool pads as they can scratch the steel.
3. Do not use bleach or any corrosive detergent as they will damage the surface of the unit.

Equipment Care

1. Position the heater where required and lock the castors to prevent the heater from moving.
2. Slacken the locking knobs and rotate the heater body to the required angle. Tighten the locking knobs on each side to lock into place.
3. The angle of tilt MUST NOT exceed 45degrees as this could lead to the heater overheating.
4. NEVER position the heater pointing vertically downwards.
5. Connect the mains cable to a suitable power supply.
6. Use the On/Off switches to on either one or both heating elements.
7. ALWAYS allow heater to cool down for 15 minutes and disconnect from mains supply before performing any cleaning or maintenance.

Operation

1. The equipment is designed to plug directly into a standard 240volt, 13 amp power socket. Make sure the equipment and power socket are switched off before plugging into the power supply.
2. If the equipment fails to operate or the power cable or plug become damaged, contact your hire. Do not try to repair it yourself.
3. Keep the power cable out of harm's way.
4. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.
5. Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.
6. ALWAYS disconnect from the mains or performing any cleaning or maintenance supply before moving the heater or tasks.